

ConservatoryLand®

More light. More space. More living.



Door Hinge adjustment guide **ment**

Comprehensive instructions for adjusting hinges on French doors & single doors

Adjustment instructions



Compression Adjustment

+/- 1.5mm

4mm Allen Key

Rotate the Allen Key clockwise or anti-clockwise to give the required compression setting
Ensure compression is evenly distributed across all hinges

Note: In rotation positive "click" positions are felt - (2 in each direction from the central position)



Height Adjustment

+ 8mm

- 0

5mm Allen Key

Rotate the Allen Key clockwise to give the required height setting
Ensure that the weight of the door is evenly distributed across all hinges



Lateral Adjustment

+/- 6mm

5mm Allen Key

Rotate the Allen Key clockwise or anti-clockwise to give the required lateral setting
Ensure even distribution across all hinges

Removing the Door Sash



Open the door to access the Cover Retaining Screws. These are self retaining screws therefore to release the cover the screws must be completely uncrewed. However, the screws do not come out.



Pull the cover out towards the centre of the door. On release a click will be heard. If the cover does not open by hand, a screw driver can be used behind the knuckle to gently assist opening. Repeat stages 1 and 2.

