


Internal Pelmet Installation Guide

For roofs with standard or Highline gutter




Use in conjunction with main roof installation guide & roof layout drawing

Internal Pelmet overview

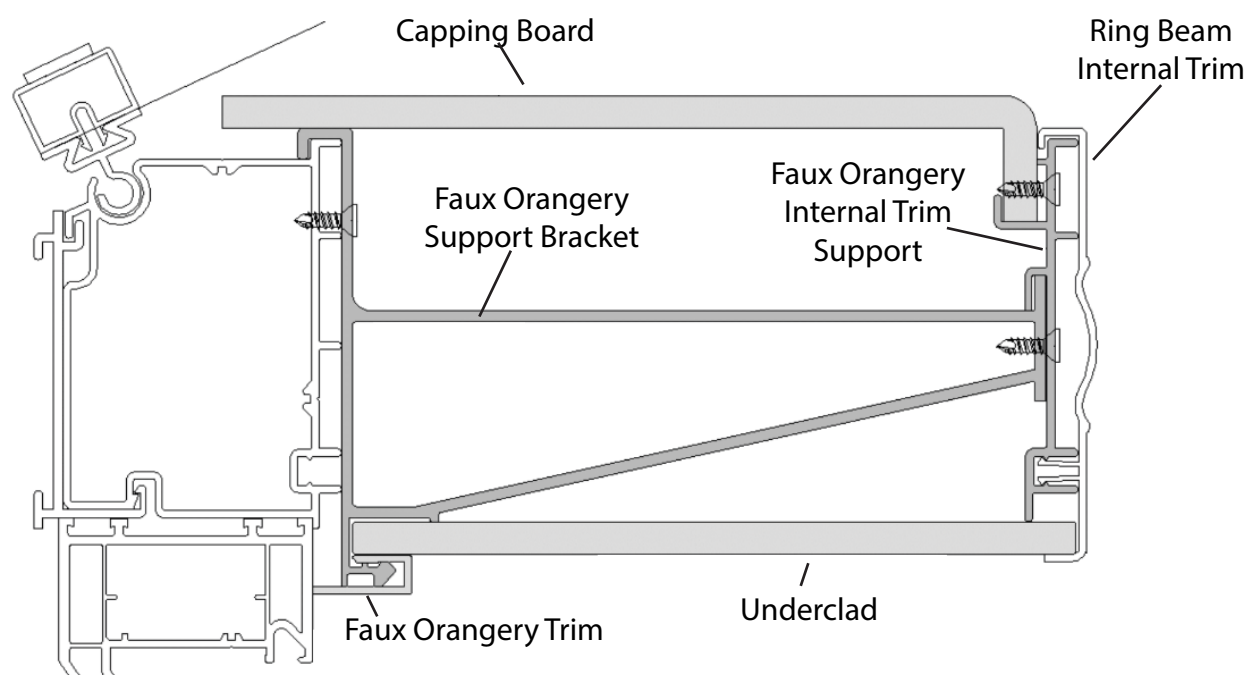

Instruction drawings required

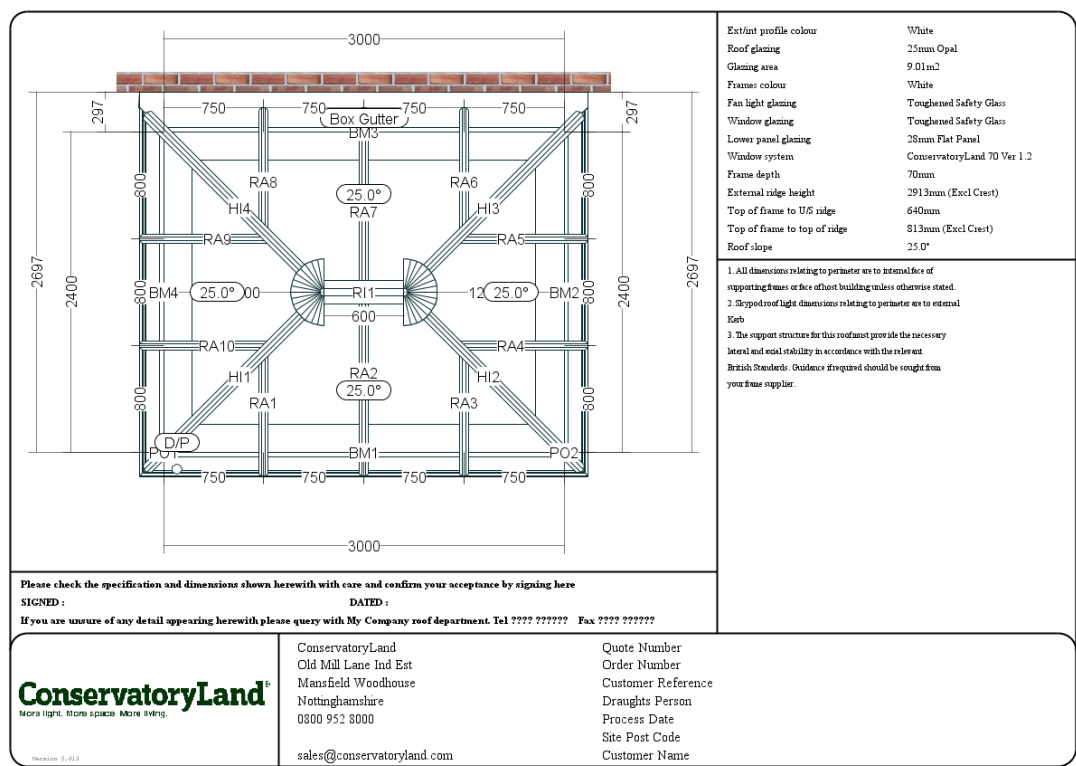


Refer to your roof plan that you used to build the main roof structure. The numbering for your Internal Pelmet parts are the same as the roof ring beams.

All roof components including your box of ancillary, gutter & fixings will have blue tape on them.


Summarised order of fitting

Below is a summarised order of the general stages of fitting the pelmet. The left side shows Internal Pelmet only, the right shows Internal Pelmet with Decorative Highline Gutter.

1

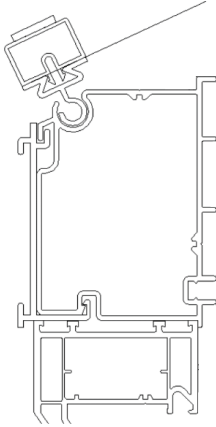


1

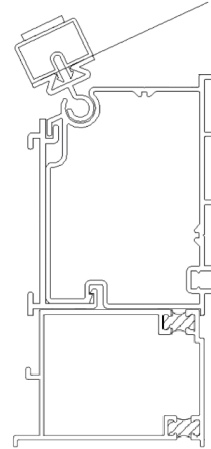


Start with your fully built roof structure.

2

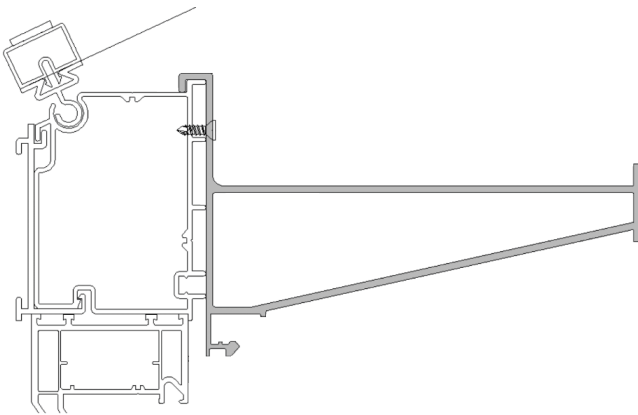


2

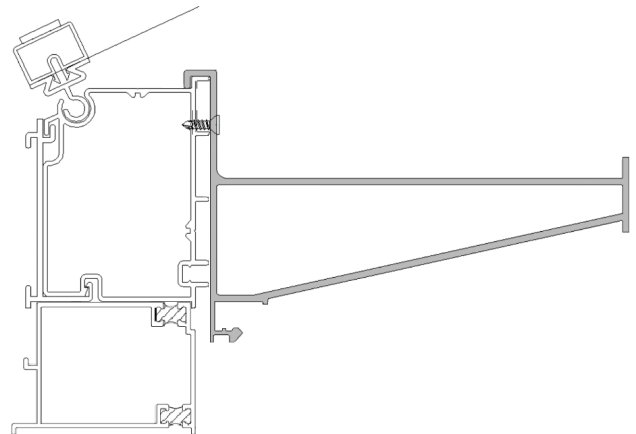


Fit the Faux Orangery Support Brackets first. (Brackets for the corners of your roof are cut down versions).

3

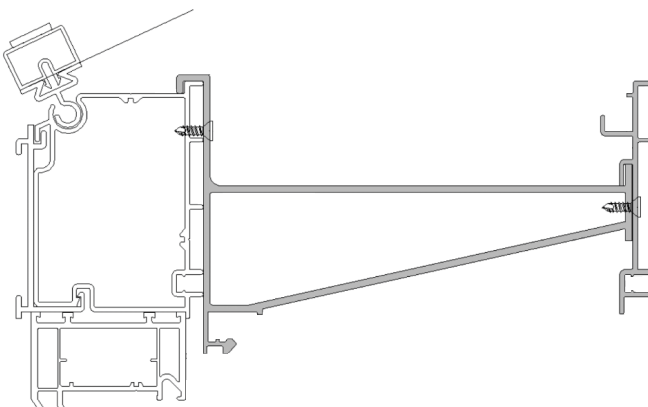

3


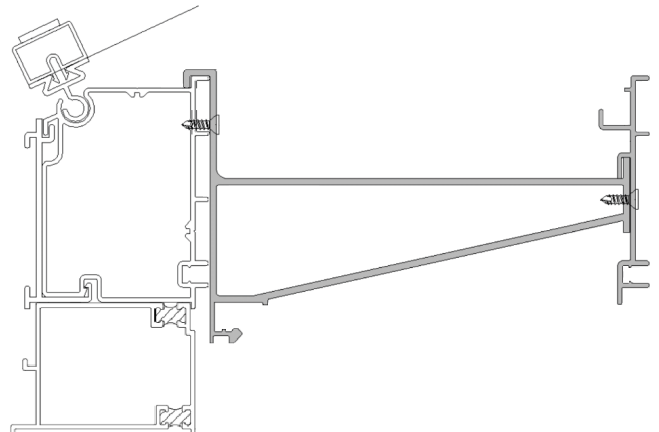


Secondly add the Faux Orangery Internal Trim Support.

Summarised order of fitting - Continued

4



4

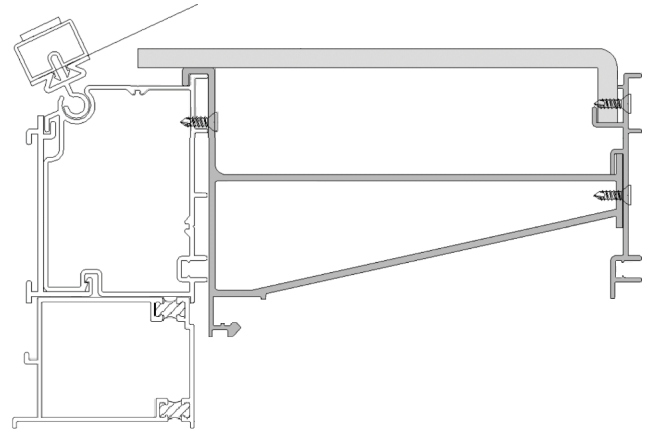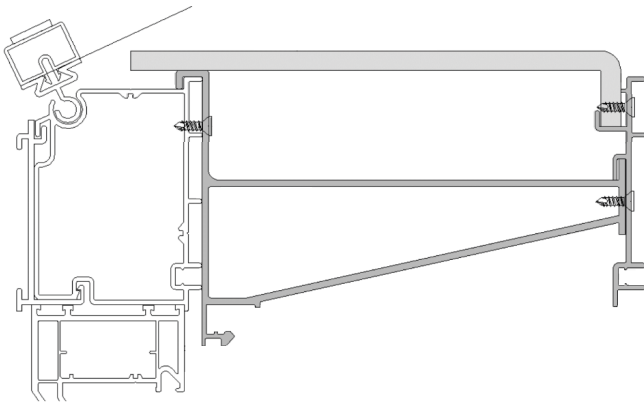

Next fit the Capping Board

5



5

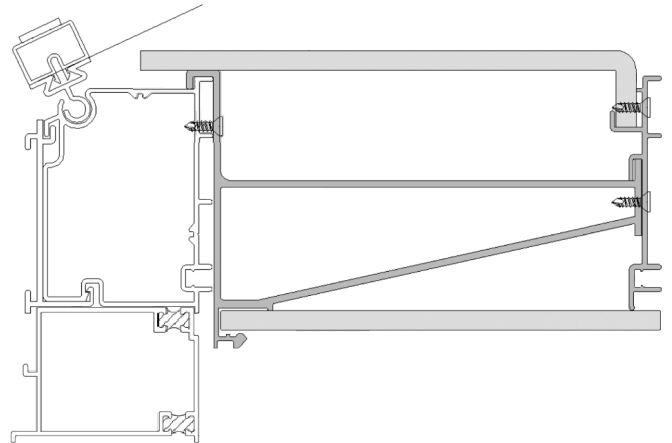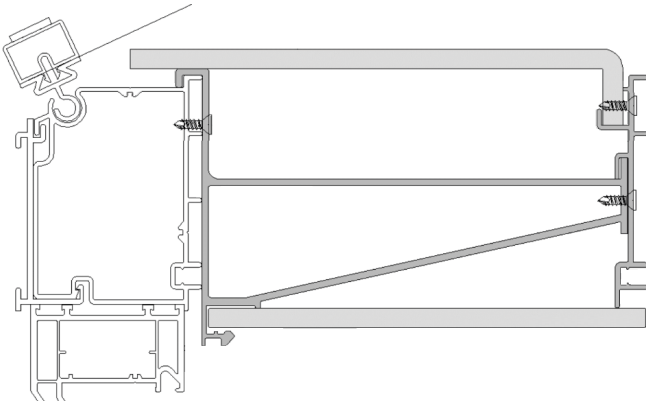

Followed by the Underclad.

6


6

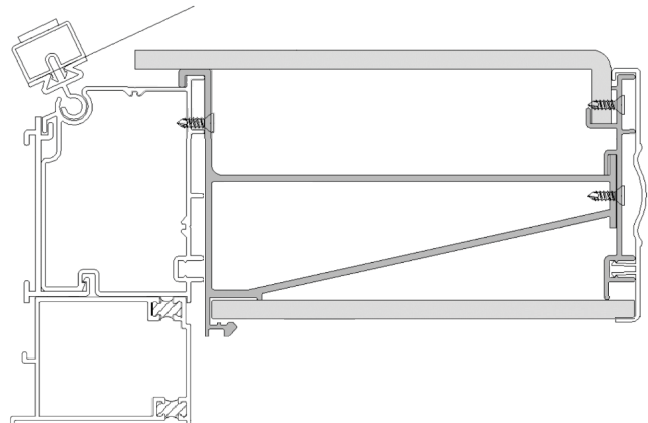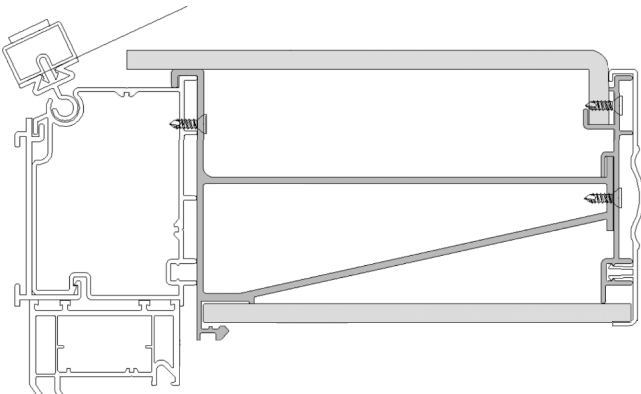


Then add the Ring Beam Internal Trim.

Summarised order of fitting - Continued

7

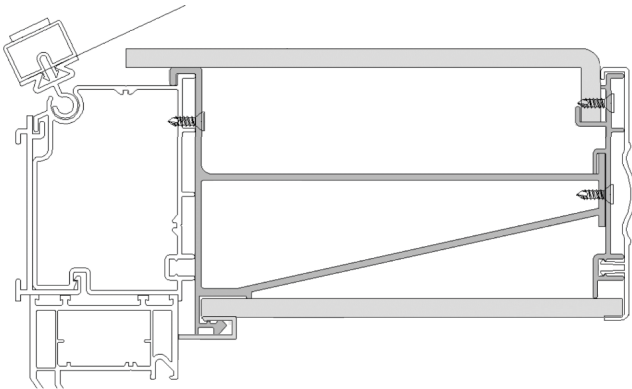


7

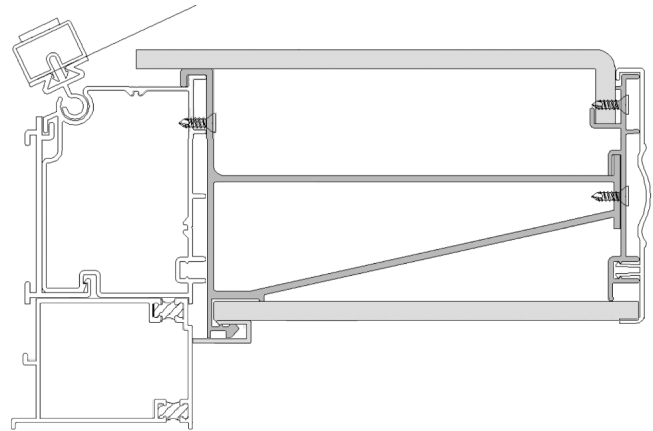


Finally add the Faux Orangery Trim.

Faux Orangery Support Brackets

The brackets used in the corners are modified Faux Orangery Support Brackets. Faux Orangery Support Brackets should be placed at 300mm - 500mm centres, but no more than 500mm.

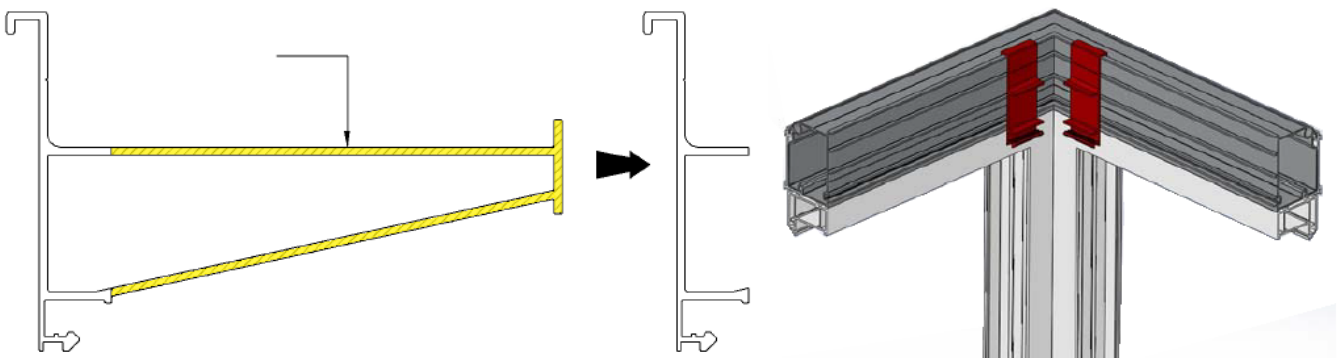


See below for the correct positioning of the brackets in the corners of your conservatory roof.

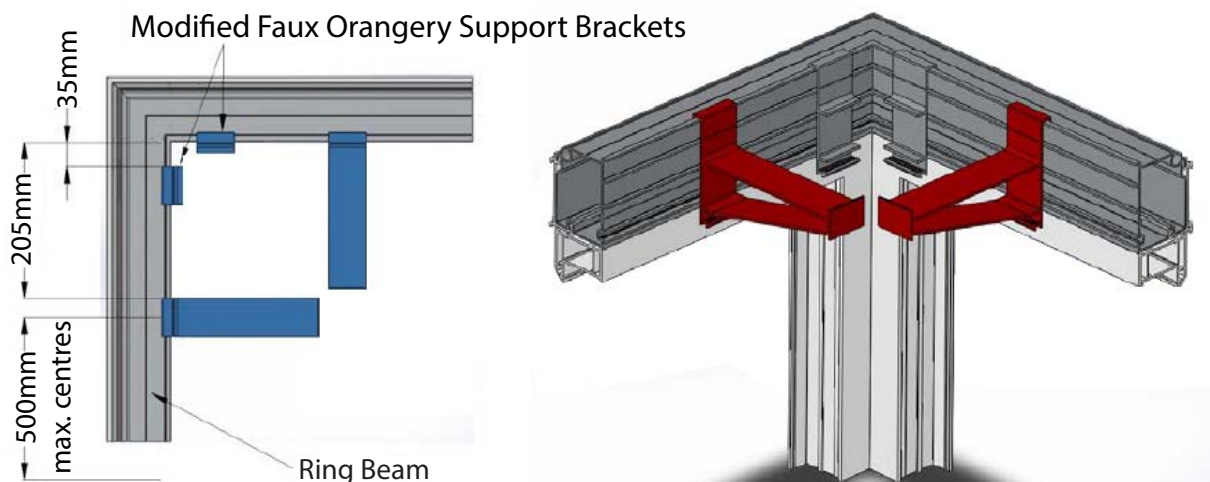


Faux Orangery Internal Trim Support

Once all brackets are in place screw them into position using the 16mm self drilling screws.

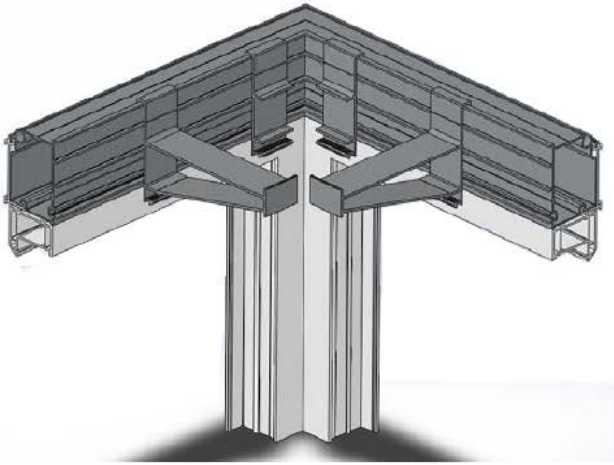


Locate the Internal Trim Support and screw into place using the 16mm self drilling screws.

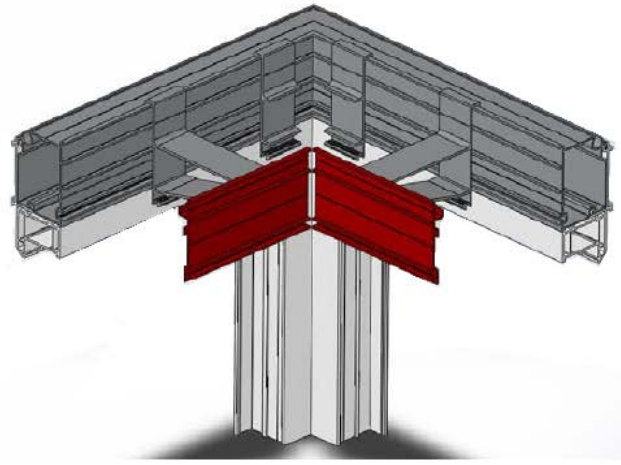


Capping board, Underclad & Ring Beam Internal Trim

Locate the Capping board and screw into position.

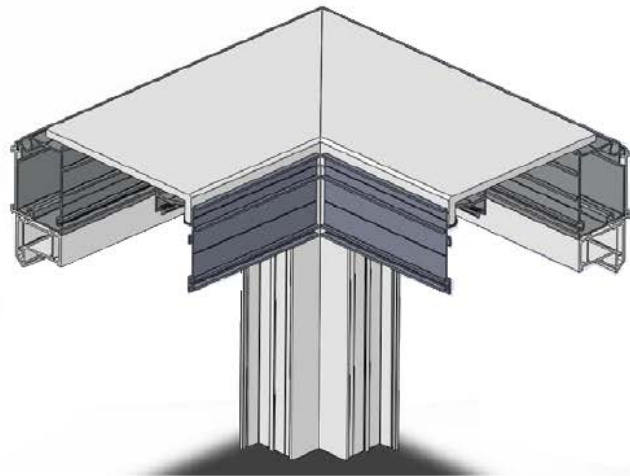

Offer up the Underclad and clip the Ring Beam Internal Trim into place.

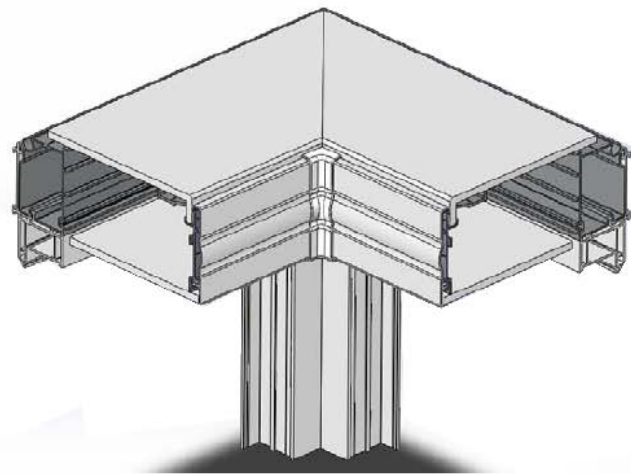

Faux Orangery Trim

Clip into position the Faux Orangery Trim. The corners can be either mitred or square cut.

